

PRODUCT-DETAILS

1724-726

1724-726 Afdekraam 4gang(s) chroom - impuls



Algemene informatie

Type	1724-726
Artikelnummer	2CKA001754A4136
EAN	4011395003640
Omschrijving	1724-726 Afdekraam 4gang(s) chroom - impuls
Omschrijving	Afdekraam 4-voudig afdekraam Voor verticale of horizontale montage.

Installation

Instructies en handleidingen	No document needed
------------------------------	--------------------

Technical

Gegevensblad, technische informatie	No document needed
Aantal eenheden	4
Schakelaarprogramma	impuls
Montagetype	Inbouw
Soort bevestiging	Klem
Montagerichting	Horizontaal Verticaal
Uitvoering oppervlakte	Glanzend Gegalvaniseerd
Materiaal	Thermoplast

Voorzien van labelruimte	Nee
Kleur	chrom

Environmental

Beschermingsgraad	IP20
RoHS-status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
RoHS-informatie	2CKA200000E2607
REACH-verklaring	2CKA309999E9999

Dimensions

Product netto breedte	96 mm
Product netto hoogte	19 mm
Product netto diepte	304 mm
Product netto gewicht	0.031 kg

Ordering

Minimale bestelhoeveelheid	1 stuk
Pakketniveau 1 Units	karton 1 stuk
Pakketniveau 1 Brutogewicht	0.031 kg
Nummer douanetarief	85389099
Land van herkomst	Germany (DE)

Certificates and Declarations

Conformiteitsverklaring - CE	2CKA200000E2607
------------------------------	-----------------

Classifications

ETIM 8	EC000007 - Afdekraam schakelmateriaal
ETIM 9	EC000007 - Afdekraam schakelmateriaal
WEEE-categorie	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001731A1952	1716-783 Cover Busch-Infolicht® aluminium silver - impuls	1716-783	1	piece
2CKA001753A4864	1740 DR-74 Cover plate with legend Venetian blind Turn button Symbol "arrows" alpine white - impuls	1740 DR-74	1	piece
2CKA001753A0033	1740 DR-783 Cover plate with legend Venetian blind Turn button Symbol "arrows" aluminium silver - impuls	1740 DR-783	1	piece
2CKA001753A8311	1740 DRL-74 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" alpine white	1740 DRL-74	1	piece
2CKA001753A4930	1742-74 Cover Plate Blind cap 1 gang with Mounting plate alpine white - impuls	1742-74	1	piece
2CKA001753A0035	1742-783 Cover Plate Blind cap 1 gang with Mounting plate aluminium silver - impuls	1742-783	1	piece

2CKA001753A4773	1743-03-74 Cover Plate SAT 3 gang alpine white - impuls	1743-03-74	1	piece
2CKA001753A0038	1743-03-783 Cover Plate SAT 3 gang aluminium silver - impuls	1743-03-783	1	piece
2CKA001753A4963	1743-74 Cover Plate SAT 2 gang alpine white - impuls	1743-74	1	piece
2CKA001753A0040	1743-783 Cover Plate SAT 2 gang aluminium silver - impuls	1743-783	1	piece
2CKA001753A9046	1746/10-74 Cover Plate Telecommunication inserts 50 x 50 mm alpine white - impuls	1746/10-74	1	piece
2CKA001753A0042	1746/10-783 Cover Plate Telecommunication inserts 50 x 50 mm aluminium silver - impuls	1746/10-783	1	piece
2CKA001753A4997	1746-74 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang alpine white - impuls	1746-74	1	piece
2CKA001753A0044	1746-783 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang aluminium silver - impuls	1746-783	1	piece
2CKA001753A5002	1749-74 Cover Plate Cable outlet alpine white - impuls	1749-74	1	piece
2CKA001753A0047	1749-783 Cover Plate Cable outlet aluminium silver - impuls	1749-783	1	piece
2CKA001753A4971	1751-74 Cover Plate Loudspeaker 2 gang alpine white - impuls	1751-74	1	piece
2CKA001753A0049	1751-783 Cover Plate Loudspeaker 2 gang aluminium silver - impuls	1751-783	1	piece
2CKA001753A4922	1756-74 Cover Plate Busch-Infolicht® alpine white - impuls	1756-74	1	piece
2CKA001753A0051	1756-783 Cover Plate Busch-Infolicht® aluminium silver - impuls	1756-783	1	piece
2CKA001753A5010	1758-74 Cover plate with labelling field For data connection housing 2 gang alpine white - impuls	1758-74	1	piece
2CKA001753A0054	1758-783 Cover plate with labelling field For data connection housing 2 gang aluminium silver - impuls	1758-783	1	piece
2CKA001753A4989	1766-74 Cover Plate TAE 1 gang alpine white - impuls	1766-74	1	piece
2CKA001753A0056	1766-783 Cover Plate TAE 1 gang aluminium silver - impuls	1766-783	1	piece
2CKA001753A4906	1770-74 Cover plate with legend Time switch Turn button 1 ... 15 Min alpine white - impuls	1770-74	1	piece
2CKA001753A0058	1770-783 Cover plate with legend Time switch Turn button 1 ... 15 Min aluminium silver - impuls	1770-783	1	piece
2CKA001753A4914	1771-74 Cover plate with legend Time switch Turn button 10 ... 120 Min alpine white - impuls	1771-74	1	piece
2CKA001753A0061	1771-783 Cover plate with legend Time switch Turn button 10 ... 120 Min aluminium silver - impuls	1771-783	1	piece
2CKA001753A4849	1781-74 Cover plate with labelling field Switch/push button Single push button alpine white - impuls	1781-74	1	piece
2CKA001753A0063	1781-783 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1781-783	1	piece
2CKA001753A4856	1785-74 Cover Plate Switch/push button Two-part rocker alpine white - impuls	1785-74	1	piece
2CKA001753A0065	1785-783 Cover Plate Switch/push button Two-part rocker aluminium silver - impuls	1785-783	1	piece
2CKA001753A9977	1786-74-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - impuls	1786-74-500	1	piece
2CKA001753A0007	1786-74-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - impuls	1786-74-507	1	piece
2CKA001753A0067	1786-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1786-783	1	piece
2CKA001753A6588	1789 H-74-101 Cover plate with labelling field Switch/push button Single rocker alpine white - impuls	1789 H-74-101	1	piece
2CKA001753A0069	1789 H-783-101 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1789 H-783-101	1	piece

2CKA001753A4823	1789 KI-74 Cover Plate Switch/push button Single rocker alpine white - impuls	1789 KI-74	1	piece
2CKA001753A0071	1789 KI-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789 KI-783	1	piece
2CKA001753A4815	1789 LI-74 Cover plate with legend Switch/push button Single rocker Symbol "light" alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0073	1789 LI-783 Cover plate with legend Switch/push button Single rocker Symbol "arrows" aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A4831	1789 TR-74 Cover Plate Switch/push button Single rocker alpine white - impuls	1789 TR-74	1	piece
2CKA001753A0075	1789 TR-783 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789 TR-783	1	piece
2CKA001753A6547	1789-74-101 Cover Plate Switch/push button Single rocker alpine white - impuls	1789-74-101	1	piece
2CKA001753A0077	1789-783-101 Cover Plate Switch/push button Single rocker aluminium silver - impuls	1789-783-101	1	piece
2CKA001753A6703	1792-74 Cover plate with legend Hotel card Hotel card Card alpine white - impuls	1792-74	1	piece
2CKA001753A0080	1792-783 Cover plate with legend Hotel card Hotel card Card aluminium silver - impuls	1792-783	1	piece
2CKA001710A3706	1794 TA-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1794 TA-74	1	piece
2CKA001710A3775	1794 TA-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1794 TA-783	1	piece
2CKA001710A3552	1794-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1794-74	1	piece
2CKA001710A3744	1794-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1794-783	1	piece
2CKA001710A4006	1795 HK-74 Cover plate with legend for Thermostat Turn button alpine white - impuls	1795 HK-74	1	piece
2CKA001710A4010	1795 HK-783 Cover plate with legend for Thermostat Turn button aluminium silver - impuls	1795 HK-783	1	piece
2CKA001710A4038	1795 HKEA-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795 HKEA-74	1	piece
2CKA001710A4042	1795 HKEA-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795 HKEA-783	1	piece
2CKA001710A3733	1795 TA-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795 TA-74	1	piece
2CKA001710A3777	1795 TA-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795 TA-783	1	piece
2CKA001710A3577	1795-74 Cover plate with legend for Thermostat Turn button 1 sliding switch alpine white - impuls	1795-74	1	piece
2CKA001710A3747	1795-783 Cover plate with legend for Thermostat Turn button 1 sliding switch aluminium silver - impuls	1795-783	1	piece
2CKA001753A8667	1800-74 Cover plate with labelling field Modular Jack 2 gang alpine white - impuls	1800-74	1	piece
2CKA001753A0082	1800-783 Cover plate with labelling field Modular Jack 2 gang aluminium silver - impuls	1800-783	1	piece
2CKA001753A9004	1803-02-74 Cover Plate UAE/IAE (ISDN) 2 gang alpine white - impuls	1803-02-74	1	piece
2CKA001753A0084	1803-02-783 Cover Plate UAE/IAE (ISDN) 2 gang aluminium silver - impuls	1803-02-783	1	piece
2CKA001753A8964	1803-74 Cover Plate UAE/IAE (ISDN) 1 gang alpine white - impuls	1803-74	1	piece
2CKA001753A0087	1803-783 Cover Plate UAE/IAE (ISDN) 1 gang aluminium silver - impuls	1803-783	1	piece
2CKA002011A6220	20 EUC-74-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) alpine white - impuls	20 EUC-74-500	1	piece
2CKA002011A3790	20 EUC-74-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) alpine white - impuls	20 EUC-74-507	1	piece
2CKA002011A3845	20 EUC-783 Socket Protective Contact (SCHUKO) aluminium silver - impuls	20 EUC-783	1	piece

2CKA002013A4953	20 EUCKS-74 Socket Protective Contact (SCHUKO) Safety Shutter alpine white - impuls	20 EUCKS-74	1	piece
2CKA002013A5275	20 EUCKS-783 Socket Protective Contact (SCHUKO) Safety Shutter aluminium silver - impuls	20 EUCKS-783	1	piece
2CKA002018A0992	20 EUK-74 Socket insert Protective Contact (SCHUKO) with Hinged Lid alpine white - impuls	20 EUK-74	1	piece
2CKA002018A1489	20 EUK-783 Socket insert Protective Contact (SCHUKO) with Hinged Lid aluminium silver - impuls	20 EUK-783	1	piece
2CKA002011A2712	20 EUN-74 Socket insert Protective Contact (SCHUKO) alpine white - impuls	20 EUN-74	1	piece
2CKA002011A3847	20 EUN-783 Socket insert Protective Contact (SCHUKO) aluminium silver - impuls	20 EUN-783	1	piece
2CKA002017A0822	20 MUC-74-500 Socket insert Earthing Pin alpine white - impuls	20 MUC-74-500	1	piece
2CKA002017A0844	20 MUC-783-500 Socket insert Earthing Pin aluminium silver - impuls	20 MUC-783-500	1	piece
2CKA002017A0830	20 MUCC-74-500 Socket insert Earthing Pin alpine white - impuls	20 MUCC-74-500	1	piece
2CKA002017A0836	20 MUCKS-74-500 Socket insert French norm NF alpine white - impuls	20 MUCKS-74-500	1	piece
2CKA002017A0846	20 MUCKS-783-500 Cover Plates (partly incl. Insert) French norm NF aluminium silver - impuls	20 MUCKS-783-500	1	piece
2CKA002113A0439	2300 UCRKS-74-503 Cover Plates (partly incl. Insert) alpine white - impuls	2300 UCRKS-74-503	1	piece
2CKA002011A3841	2310 EUGL/VA-74-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) alpine white - impuls	2310 EUGL/VA-74-11	1	piece
2CKA002011A3849	2310 EUGL/VA-783-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) aluminium silver - impuls	2310 EUGL/VA-783-11	1	piece
2CKA002099A0232	2399 UCKS-74 Cover Plates (partly incl. Insert) alpine white - impuls	2399 UCKS-74	1	piece
2CKA002099A0240	2399 UCKS-783 Cover Plates (partly incl. Insert) aluminium silver - impuls	2399 UCKS-783	1	piece
2CKA001753A7222	2767-74 Cover Plates (partly incl. Insert) TAE 1 gang alpine white	2767-74	1	piece
2CKA006430A0144	6430-74 Control Element for Venetian blind Single push button alpine white - impuls	6430-74	1	piece
2CKA006430A0338	6430-783 Control Element for Venetian blind Single push button aluminium silver - impuls	6430-783	1	piece
2CKA006430A0300	6435-74 Cover plate with legend for Time switch alpine white - impuls	6435-74	1	piece
2CKA006430A0342	6435-783 Cover plate with legend for Time switch aluminium silver - impuls	6435-783	1	piece
2CKA006599A2084	6540-74 Cover Plate for Dimmer Turn button alpine white - impuls	6540-74	1	piece
2CKA006599A2917	6540-783 Cover Plate for Dimmer Turn button aluminium silver - impuls	6540-783	1	piece
2CKA006599A2076	6541-74 Cover Plate for Cooling Central cover plate alpine white - impuls	6541-74	1	piece
2CKA006599A2597	6543-74-101 Control Element for Switch/dimmer Single push button alpine white - impuls	6543-74-101	1	piece
2CKA006599A2921	6543-783-101 Control Element for Switch/dimmer Single push button aluminium silver - impuls	6543-783-101	1	piece
2CKA006599A2903	6545-74 Control Element for Dimmer Two-part button alpine white - impuls	6545-74	1	piece
2CKA008200A0090	8253-74 Cover Plate Loudspeaker white - impuls	8253-74	1	piece
2CKA008200A0117	8253-777 Cover Plate Loudspeaker red	8253-777	1	piece
2CKA008200A0092	8253-783 Cover Plate Loudspeaker aluminium - impuls	8253-783	1	piece
2CKA001731A1984	1716-774 Cover Busch-Infolicht® studio white matt - impuls	1716-774	1	piece
2CKA001731A1983	1716-775 Cover Busch-Infolicht® black matt - impuls	1716-775	1	piece
2CKA001731A1944	1716-79 Cover Busch-Infolicht® champagne metallic - impuls	1716-79	1	piece
2CKA001753A0032	1740 DR-72 Cover Plate Venetian blind Turn button Symbol "arrows" and "0" ivory - impuls	1740 DR-72	1	piece

2CKA001753A0164	1740 DR-774 Cover plate with legend Venetian blind Turn button Symbol "arrows" studio white matt - impuls	1740 DR-774	1	piece
2CKA001753A0136	1740 DR-775 Cover plate with legend Venetian blind Turn button Symbol "arrows" black matt - impuls	1740 DR-775	1	piece
2CKA001753A5341	1740 DR-79 Cover Plate Venetian blind Turn button Symbol "arrows" and "0" champagne metallic - impuls	1740 DR-79	1	piece
2CKA001753A0165	1740 DRL-774 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" studio white matt - impuls	1740 DRL-774	1	piece
2CKA001753A0137	1740 DRL-775 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" black matt - impuls	1740 DRL-775	1	piece
2CKA001753A8345	1740 DRL-79 Cover Plates (partly incl. Insert) Level switch Turn button Symbol "2-1-3" champagne metallic - impuls	1740 DRL-79	1	piece
2CKA001753A0034	1742-72 Cover Plate Blind cap 1 gang with Mounting plate ivory - impuls	1742-72	1	piece
2CKA001753A0166	1742-774 Cover Plate Blind cap 1 gang with Mounting plate studio white matt - impuls	1742-774	1	piece
2CKA001753A0138	1742-775 Cover Plate Blind cap 1 gang with Mounting plate black matt - impuls	1742-775	1	piece
2CKA001753A5416	1742-79 Cover Plate Blind cap 1 gang with Mounting plate champagne metallic - impuls	1742-79	1	piece
2CKA001753A0036	1743-03-72 Cover Plate TV / Radio / SAT 3 gang ivory - impuls	1743-03-72	1	piece
2CKA001753A0167	1743-03-774 Cover Plate SAT 3 gang studio white matt - impuls	1743-03-774	1	piece
2CKA001753A0139	1743-03-775 Cover Plate SAT 3 gang black matt - impuls	1743-03-775	1	piece
2CKA001753A5846	1743-03-79 Cover Plate SAT 3 gang champagne metallic - impuls	1743-03-79	1	piece
2CKA001753A0039	1743-72 Cover Plate SAT 2 gang ivory - impuls	1743-72	1	piece
2CKA001753A0168	1743-774 Cover Plate SAT 2 gang studio white matt - impuls	1743-774	1	piece
2CKA001753A0140	1743-775 Cover Plate SAT 2 gang black matt - impuls	1743-775	1	piece
2CKA001753A5440	1743-79 Cover Plate SAT 2 gang champagne metallic - impuls	1743-79	1	piece
2CKA001753A0041	1746/10-72 Cover Plate Telecommunication inserts 50 x 50 mm ivory - impuls	1746/10-72	1	piece
2CKA001753A0170	1746/10-774 Cover Plate Telecommunication inserts 50 x 50 mm studio white matt - impuls	1746/10-774	1	piece
2CKA001753A0141	1746/10-775 Cover Plate Telecommunication inserts 50 x 50 mm black matt - impuls	1746/10-775	1	piece
2CKA001753A9079	1746/10-79 Cover Plate Telecommunication inserts 50 x 50 mm champagne metallic - impuls	1746/10-79	1	piece
2CKA001753A0043	1746-72 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang ivory - impuls	1746-72	1	piece
2CKA001753A0171	1746-774 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang studio white matt - impuls	1746-774	1	piece
2CKA001753A0142	1746-775 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang black matt - impuls	1746-775	1	piece
2CKA001753A5473	1746-79 Cover Plate Telecommunication inserts 50 x 50 mm 1 gang champagne metallic - impuls	1746-79	1	piece
2CKA001753A0046	1749-72 Cover Plate Cable outlet ivory - impuls	1749-72	1	piece
2CKA001753A0172	1749-774 Cover Plate Cable outlet studio white matt - impuls	1749-774	1	piece
2CKA001753A0143	1749-775 Cover Plate Cable outlet black matt - impuls	1749-775	1	piece
2CKA001753A5481	1749-79 Cover Plate Cable outlet champagne metallic - impuls	1749-79	1	piece
2CKA001753A0048	1751-72 Cover Plate Loudspeaker 2 gang ivory - impuls	1751-72	1	piece
2CKA001753A0173	1751-774 Cover Plate Loudspeaker 2 gang studio white matt - impuls	1751-774	1	piece
2CKA001753A0145	1751-775 Cover Plate Loudspeaker 2 gang black matt - impuls	1751-775	1	piece

2CKA001753A5457	1751-79 Cover Plate Loudspeaker 2 gang champagne metallic - impuls	1751-79	1	piece
2CKA001753A0050	1756-72 Cover Plate Busch-Infolicht® ivory - impuls	1756-72	1	piece
2CKA001753A0174	1756-774 Cover Plate Busch-Infolicht® studio white matt - impuls	1756-774	1	piece
2CKA001753A0146	1756-775 Cover Plate Busch-Infolicht® black matt - impuls	1756-775	1	piece
2CKA001753A5408	1756-79 Cover Plate champagne metallic - impuls	1756-79	1	piece
2CKA001753A0053	1758-72 Cover plate with labelling field For data connection housing 2 gang ivory - impuls	1758-72	1	piece
2CKA001753A0175	1758-774 Cover plate with labelling field For data connection housing 2 gang studio white matt - impuls	1758-774	1	piece
2CKA001753A0147	1758-775 Cover plate with labelling field For data connection housing 2 gang black matt - impuls	1758-775	1	piece
2CKA001753A5499	1758-79 Cover plate with labelling field For data connection housing 2 gang champagne metallic - impuls	1758-79	1	piece
2CKA001753A0055	1766-72 Cover Plate TAE 1 gang ivory - impuls	1766-72	1	piece
2CKA001753A0176	1766-774 Cover Plate TAE 1 gang studio white matt - impuls	1766-774	1	piece
2CKA001753A0148	1766-775 Cover Plate TAE 1 gang black matt - impuls	1766-775	1	piece
2CKA001753A5465	1766-79 Cover Plate TAE 1 gang champagne metallic - impuls	1766-79	1	piece
2CKA001753A0057	1770-72 Cover plate with legend Time switch Turn button Various symbols ivory - impuls	1770-72	1	piece
2CKA001753A0178	1770-774 Cover plate with legend Time switch Turn button 1 ... 15 Min studio white matt - impuls	1770-774	1	piece
2CKA001753A0149	1770-775 Cover plate with legend Time switch Turn button 1 ... 15 Min black matt - impuls	1770-775	1	piece
2CKA001753A5382	1770-79 Cover plate with legend Time switch Turn button 1 ... 15 Min champagne metallic - impuls	1770-79	1	piece
2CKA001753A0059	1771-72 Cover plate with legend Time switch Turn button Various symbols ivory - impuls	1771-72	1	piece
2CKA001753A0179	1771-774 Cover plate with legend Time switch Turn button 10 ... 120 Min studio white matt - impuls	1771-774	1	piece
2CKA001753A0150	1771-775 Cover plate with legend Time switch Turn button 10 ... 120 Min black matt - impuls	1771-775	1	piece
2CKA001753A5390	1771-79 Cover plate with legend Time switch Turn button 10 ... 120 Min champagne metallic - impuls	1771-79	1	piece
2CKA001753A0062	1781-72 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1781-72	1	piece
2CKA001753A0180	1781-774 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1781-774	1	piece
2CKA001753A0151	1781-775 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1781-775	1	piece
2CKA001753A5325	1781-79 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1781-79	1	piece
2CKA001753A0064	1785-72 Cover Plate Switch/push button Two-part rocker ivory - impuls	1785-72	1	piece
2CKA001753A0181	1785-774 Cover Plate Switch/push button Two-part rocker studio white matt - impuls	1785-774	1	piece
2CKA001753A0152	1785-775 Cover Plate Switch/push button Two-part rocker black matt - impuls	1785-775	1	piece
2CKA001753A5333	1785-79 Cover Plate Switch/push button Two-part rocker champagne metallic - impuls	1785-79	1	piece
2CKA001753A9976	1786-72-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint ivory - impuls	1786-72-500	1	piece
2CKA001753A0182	1786-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1786-774	1	piece

2CKA001753A0183	1786-774-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white matt - impuls	1786-774-507	1	piece
2CKA001753A0153	1786-775 Cover Plate Switch/push button Single rocker black matt - impuls	1786-775	1	piece
2CKA001753A5267	1786-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1786-79	1	piece
2CKA001753A0008	1786-79-507 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint champagne metallic - impuls	1786-79-507	1	piece
2CKA001753A0068	1789 H-72-101 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A0184	1789 H-774-101 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1789 H-774- 101	1	piece
2CKA001753A0154	1789 H-775-101 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1789 H-775- 101	1	piece
2CKA001753A6612	1789 H-79-101 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001753A0070	1789 KI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 KI-72	1	piece
2CKA001753A0186	1789 KI-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789 KI-774	1	piece
2CKA001753A0155	1789 KI-775 Cover Plate Switch/push button Single rocker black matt - impuls	1789 KI-775	1	piece
2CKA001753A5309	1789 KI-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789 KI-79	1	piece
2CKA001753A0072	1789 LI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A0187	1789 LI-774 Cover plate with legend Switch/push button Single rocker Symbol "light" studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	1789 LI-775 Cover plate with legend Switch/push button Single rocker Symbol "light" black matt - impuls	1789 LI-775	1	piece
2CKA001753A5291	1789 LI-79 Cover plate with legend Switch/push button Single rocker Symbol "light" champagne metallic - impuls	1789 LI-79	1	piece
2CKA001753A0074	1789 TR-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 TR-72	1	piece
2CKA001753A0188	1789 TR-774 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789 TR-774	1	piece
2CKA001753A0157	1789 TR-775 Cover Plate Switch/push button Single rocker black matt - impuls	1789 TR-775	1	piece
2CKA001753A5317	1789 TR-79 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789 TR-79	1	piece
2CKA001753A0076	1789-72-101 Cover Plate Switch/push button Single rocker ivory - impuls	1789-72-101	1	piece
2CKA001753A0189	1789-774-101 Cover Plate Switch/push button Single rocker studio white matt - impuls	1789-774-101	1	piece
2CKA001753A0158	1789-775-101 Cover Plate Switch/push button Single rocker black matt - impuls	1789-775-101	1	piece
2CKA001753A6570	1789-79-101 Cover Plate Switch/push button Single rocker champagne metallic - impuls	1789-79-101	1	piece
2CKA001753A0079	1792-72 Cover plate with legend Hotel card Hotel card Card ivory - impuls	1792-72	1	piece
2CKA001753A0190	1792-774 Cover plate with legend Hotel card Hotel card Card studio white matt - impuls	1792-774	1	piece
2CKA001753A0159	1792-775 Cover plate with legend Hotel card Hotel card Card black matt - impuls	1792-775	1	piece
2CKA001753A6737	1792-79 Cover plate with legend Hotel card Hotel card Card champagne metallic - impuls	1792-79	1	piece
2CKA001710A3774	1794 TA-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1794 TA-72	1	piece
2CKA001710A3921	1794 TA-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1794 TA-774	1	piece
2CKA001710A3916	1794 TA-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1794 TA-775	1	piece

2CKA001710A3708	1794 TA-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1794 TA-79	1	piece
2CKA001710A3745	1794-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1794-72	1	piece
2CKA001710A3922	1794-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1794-774	1	piece
2CKA001710A3917	1794-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1794-775	1	piece
2CKA001710A3554	1794-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1794-79	1	piece
2CKA001710A4005	1795 HK-72 Cover plate with legend for Thermostat Turn button ivory - impuls	1795 HK-72	1	piece
2CKA001710A4007	1795 HK-774 Cover plate with legend for Thermostat Turn button studio white matt - impuls	1795 HK-774	1	piece
2CKA001710A4008	1795 HK-775 Cover plate with legend for Thermostat Turn button black matt - impuls	1795 HK-775	1	piece
2CKA001710A4011	1795 HK-79 Cover plate with legend for Thermostat Turn button champagne metallic - impuls	1795 HK-79	1	piece
2CKA001710A4037	1795 HKEA-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795 HKEA-72	1	piece
2CKA001710A4039	1795 HKEA-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795 HKEA- 774	1	piece
2CKA001710A4040	1795 HKEA-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795 HKEA- 775	1	piece
2CKA001710A4043	1795 HKEA-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795 HKEA-79	1	piece
2CKA001710A3776	1795 TA-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795 TA-72	1	piece
2CKA001710A3923	1795 TA-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795 TA-774	1	piece
2CKA001710A3918	1795 TA-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795 TA-775	1	piece
2CKA001710A3735	1795 TA-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795 TA-79	1	piece
2CKA001710A3746	1795-72 Cover plate with legend for Thermostat Turn button 1 sliding switch ivory - impuls	1795-72	1	piece
2CKA001710A3924	1795-774 Cover plate with legend for Thermostat Turn button 1 sliding switch studio white matt - impuls	1795-774	1	piece
2CKA001710A3919	1795-775 Cover plate with legend for Thermostat Turn button 1 sliding switch black matt - impuls	1795-775	1	piece
2CKA001710A3579	1795-79 Cover plate with legend for Thermostat Turn button 1 sliding switch champagne metallic - impuls	1795-79	1	piece
2CKA001753A0081	1800-72 Cover Plate Modular Jack 2 gang ivory - impuls	1800-72	1	piece
2CKA001753A0191	1800-774 Cover plate with labelling field Modular Jack 2 gang studio white matt - impuls	1800-774	1	piece
2CKA001753A0160	1800-775 Cover plate with labelling field Modular Jack 2 gang black matt - impuls	1800-775	1	piece
2CKA001753A8691	1800-79 Cover Plate Modular Jack 2 gang champagne metallic - impuls	1800-79	1	piece
2CKA001753A0083	1803-02-72 Cover Plate UAE/IAE (ISDN) 2 gang ivory - impuls	1803-02-72	1	piece
2CKA001753A0192	1803-02-774 Cover Plate UAE/IAE (ISDN) 2 gang studio white matt - impuls	1803-02-774	1	piece
2CKA001753A0161	1803-02-775 Cover Plate UAE/IAE (ISDN) 2 gang black matt - impuls	1803-02-775	1	piece
2CKA001753A9038	1803-02-79 Cover Plate UAE/IAE (ISDN) 2 gang champagne metallic - impuls	1803-02-79	1	piece
2CKA001753A0085	1803-72 Cover Plate UAE/IAE (ISDN) 1 gang ivory - impuls	1803-72	1	piece

2CKA001753A0194	1803-774 Cover Plate UAE/IAE (ISDN) 1 gang studio white matt - impuls	1803-774	1	piece
2CKA001753A0162	1803-775 Cover Plate UAE/IAE (ISDN) 1 gang black matt - impuls	1803-775	1	piece
2CKA001753A8998	1803-79 Cover Plate UAE/IAE (ISDN) 1 gang champagne metallic - impuls	1803-79	1	piece
2CKA002011A6224	20 EUC-72-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) ivory - impuls	20 EUC-72-500	1	piece
2CKA002011A3890	20 EUC-774 Socket Protective Contact (SCHUKO) studio white matt - impuls	20 EUC-774	1	piece
2CKA002011A3891	20 EUC-774-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) studio white matt - impuls	20 EUC-774-507	1	piece
2CKA002011A3886	20 EUC-775 Socket Protective Contact (SCHUKO) black matt - impuls	20 EUC-775	1	piece
2CKA002011A6217	20 EUC-79-500 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) champagne metallic - impuls	20 EUC-79-500	1	piece
2CKA002011A3791	20 EUC-79-507 Cover Plates (partly incl. Insert) Protective Contact (SCHUKO) champagne metallic - impuls	20 EUC-79-507	1	piece
2CKA002013A5274	20 EUCKS-72 Socket Protective Contact (SCHUKO) Safety Shutter ivory white - impuls	20 EUCKS-72	1	piece
2CKA002013A5335	20 EUCKS-774 Socket Protective Contact (SCHUKO) Safety Shutter studio white matt - impuls	20 EUCKS-774	1	piece
2CKA002013A5334	20 EUCKS-775 Socket Protective Contact (SCHUKO) Safety Shutter black matt - impuls	20 EUCKS-775	1	piece
2CKA002013A4979	20 EUCKS-79 Socket Protective Contact (SCHUKO) Safety Shutter champagne metallic - impuls	20 EUCKS-79	1	piece
2CKA002018A1488	20 EUK-72 Socket insert Protective Contact (SCHUKO) with Hinged Lid ivory white - impuls	20 EUK-72	1	piece
2CKA002018A1497	20 EUK-774 Socket insert Protective Contact (SCHUKO) with Hinged Lid studio white matt - impuls	20 EUK-774	1	piece
2CKA002018A1496	20 EUK-775 Socket insert Protective Contact (SCHUKO) with Hinged Lid black matt - impuls	20 EUK-775	1	piece
2CKA002018A1016	20 EUK-79 Socket insert Protective Contact (SCHUKO) with Hinged Lid champagne metallic - impuls	20 EUK-79	1	piece
2CKA002011A3846	20 EUN-72 Socket insert Protective Contact (SCHUKO) ivory white - impuls	20 EUN-72	1	piece
2CKA002011A3893	20 EUN-774 Socket insert Protective Contact (SCHUKO) studio white matt - impuls	20 EUN-774	1	piece
2CKA002011A3888	20 EUN-775 Socket insert Protective Contact (SCHUKO) black matt - impuls	20 EUN-775	1	piece
2CKA002011A2787	20 EUN-79 Socket insert Protective Contact (SCHUKO) champagne metallic - impuls	20 EUN-79	1	piece
2CKA002017A0843	20 MUC-72-500 Socket insert Earthing Pin ivory white - impuls	20 MUC-72-500	1	piece
2CKA002017A0824	20 MUC-79-500 Socket insert Earthing pin champagne metallic - impuls	20 MUC-79-500	1	piece
2CKA002017A0831	20 MUCC-79-500 Socket insert Earthing Pin champagne metallic - impuls	20 MUCC-79-500	1	piece
2CKA002017A0845	20 MUCKS-72-500 Socket insert Earthing Pin Safety Shutter Earthing pin ivory white - impuls	20 MUCKS-72-500	1	piece
2CKA002017A0837	20 MUCKS-79-500 Socket insert Earthing Pin Safety Shutter champagne metallic - impuls	20 MUCKS-79-500	1	piece
2CKA001022A0623	2001/2 UKGL-101 Switch insert Rocker/button 1 rocker 2-pole switch with Neon lamp	2001/2 UKGL-101	1	piece
2CKA001012A1622	2001/5 U Switch insert Rocker/button 2 rocker Series switch	2001/5 U	1	piece
2CKA001012A2111	2001/5 U-507 Flush Mounted Inserts Rocker/button 2 rocker Series switch	2001/5 U-507	1	piece
2CKA001012A2195	2001/6 U-500 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch	2001/6 U-500	1	piece
2CKA001012A2109	2001/6 U-507 Flush Mounted Inserts Rocker/button 1 rocker Two-way switch	2001/6 U-507	1	piece
2CKA001022A0615	2001/6 UKGL-101 Switch insert Rocker/button 1 rocker Two-way switch with Neon lamp	2001/6 UKGL-101	1	piece

2CKA001012A1671	2001/6/6 U Switch insert Rocker/button 1 rocker Alternating-/alternating switch	2001/6/6 U	1	piece
2CKA001012A1630	2001/7 U Switch insert Rocker/button 1 rocker Intermediate switch	2001/7 U	1	piece
2CKA001413A0871	2021/6 U Switch insert Push button 1 rocker Single push button 0 NO 0 NC	2021/6 U	1	piece
2CKA001413A0897	2021/6 UK Switch insert Push button 1 rocker Single push button with Neon lamp 0 NO 0 NC	2021/6 UK	1	piece
2CKA001012A1705	2021/6 UNV Switch insert Push button 1 rocker Single push button 0 NO 0 NC	2021/6 UNV	1	piece
2CKA001012A2069	2021/6 UNV-201 Switch insert Push button 1 rocker Single push button 0 NO 0 NC	2021/6 UNV- 201	1	piece
2CKA001413A1051	2021/6 US-201 Switch insert Push button 1 rocker Single push button 0 NO 0 NC	2021/6 US-201	1	piece
2CKA001413A0889	2021/6/6 U Switch insert Push button 2 rocker Series push button 0 NO 0 NC	2021/6/6 U	1	piece
2CKA002113A5336	2300 UCRKS-774-503 Cover Plates (partly incl. Insert) studio white matt - impuls	2300 UCRKS- 774-503	1	piece
2CKA002113A0462	2300 UCRKS-79-503 Cover Plates (partly incl. Insert) champagne metallic - impuls	2300 UCRKS- 79-503	1	piece
2CKA002011A3848	2310 EUGL/VA-72-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) ivory white - impuls	2310 EUGL/VA -72-11	1	piece
2CKA002011A3843	2310 EUGL/VA-79-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) champagne metallic - impuls	2310 EUGL/VA -79-11	1	piece
2CKA002011A3894	2310 EUGL/VA-774-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) studio white matt - impuls	2310 EUGL/VA -774-11	1	piece
2CKA002011A3889	2310 EUGL/VA-775-11 Busch-Protector® Socket insert Protective Contact (SCHUKO) black matt - impuls	2310 EUGL/VA -775-11	1	piece
2CKA002099A0239	2399 UCKS-72 Cover Plates (partly incl. Insert) ivory - impuls	2399 UCKS-72	1	piece
2CKA002099A0258	2399 UCKS-774 Cover Plates (partly incl. Insert) studio white matt - impuls	2399 UCKS- 774	1	piece
2CKA002099A0257	2399 UCKS-775 Cover Plates (partly incl. Insert) black matt - impuls	2399 UCKS- 775	1	piece
2CKA002099A0234	2399 UCKS-79 Cover Plates (partly incl. Insert) champagne metallic - impuls	2399 UCKS-79	1	piece
2CKA001753A0195	2767-774 Cover Plates (partly incl. Insert) TAE 1 gang studio white matt	2767-774	1	piece
2CKA001753A0163	2767-775 Cover Plates (partly incl. Insert) TAE 1 gang black matt - impuls	2767-775	1	piece
2CKA001753A7255	2767-79 Cover Plates (partly incl. Insert) TAE 1 gang champagne metallic - impuls	2767-79	1	piece
2CKA006430A0337	6430-72 Control Element for Venetian blind Single push button ivory - impuls	6430-72	1	piece
2CKA006430A0379	6430-774 Control Element for Venetian blind Single push button studio white matt - impuls	6430-774	1	piece
2CKA006430A0381	6430-775 Control Element for Venetian blind Single push button black matt - impuls	6430-775	1	piece
2CKA006430A0177	6430-79 Control Element for Venetian blind Single push button champagne metallic - impuls	6430-79	1	piece
2CKA006430A0341	6435-72 Cover Plate for Time switch ivory - impuls	6435-72	1	piece
2CKA006430A0380	6435-774 Cover plate with legend for Time switch studio white matt - impuls	6435-774	1	piece
2CKA006430A0382	6435-775 Cover plate with legend for Time switch black matt - impuls	6435-775	1	piece
2CKA006430A0302	6435-79 Cover plate with legend for Time switch champagne metallic - impuls	6435-79	1	piece
2CKA006599A2916	6540-72 Cover Plate for Dimmer Turn button ivory - impuls	6540-72	1	piece
2CKA006599A2970	6540-774 Cover Plate for Dimmer Turn button studio white matt - impuls	6540-774	1	piece
2CKA006599A2974	6540-775 Cover Plate for Dimmer Turn button black matt - impuls	6540-775	1	piece
2CKA006599A2159	6540-79 Cover Plate for Dimmer Turn button champagne metallic - impuls	6540-79	1	piece

2CKA006599A2918	6541-72 Cover Plate for Cooling Central cover plate ivory - impuls	6541-72	1	piece
2CKA006599A2971	6541-774 Cover Plate for Cooling Central cover plate studio white matt - impuls	6541-774	1	piece
2CKA006599A2975	6541-775 Cover Plate for Cooling Central cover plate black matt - impuls	6541-775	1	piece
2CKA006599A2142	6541-79 Cover Plate for Cooling Central cover plate champagne metallic - impuls	6541-79	1	piece
2CKA006599A2920	6543-72-101 Control Element for Switch/dimmer Single push button ivory - impuls	6543-72-101	1	piece
2CKA006599A2972	6543-774-101 Control Element for Switch/dimmer Single push button studio white matt - impuls	6543-774-101	1	piece
2CKA006599A2976	6543-775-101 Control Element for Switch/dimmer Single push button black matt - impuls	6543-775-101	1	piece
2CKA006599A2621	6543-79-101 Control Element for Switch/dimmer Single push button champagne metallic - impuls	6543-79-101	1	piece
2CKA006599A2922	6545-72 Control Element for Dimmer Two-part button ivory - impuls	6545-72	1	piece
2CKA006599A2973	6545-774 Control Element for Dimmer Two-part button studio white matt - impuls	6545-774	1	piece
2CKA006599A2977	6545-775 Control Element for Dimmer Two-part button black matt - impuls	6545-775	1	piece
2CKA006599A2905	6545-79 Control Element for Dimmer Two-part button champagne metallic - impuls	6545-79	1	piece
2CKA008200A0089	8253-72 Cover Plate Loudspeaker white - impuls	8253-72	1	piece
2CKA008200A0130	8253-774 Cover Plate Loudspeaker white - impuls	8253-774	1	piece
2CKA008200A0128	8253-775 Cover Plate Loudspeaker black matt - impuls	8253-775	1	piece
2CKA008200A0091	8253-79 Cover Plate Loudspeaker champagne metallic - impuls	8253-79	1	piece

Categorieën

Laagspanningsproducten en -systemen → Schakelaarprogramma → Afdekramen

