


PRODUCT-DETAILS

2400/6/6 US-101

2400/6/6 US-101 Switch insert Rocker/button
2 rocker Alternating-/alternating switch

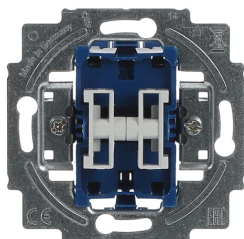

Informations générales

Extension du type de produit	2400/6/6 US-101
Code de produit	2CKA001022A0662
EAN	4011395223796
Description courte	2400/6/6 US-101 Switch insert Rocker/button 2 rocker Alternating-/alternating switch
Description longue	With screwless terminals.

Installation

Instructions et manuels	No document needed
-------------------------	--------------------

Technique

Fiche produit, informations techniques	No document needed
Tension nominale (U _r)	250 V
Auxiliary Voltage AC/DC	250 V AC/DC
Courant nominal (I _n)	16 A
Maximum Switching Current	Fluorescent Lamps 16 A
Number of Rocker Switches	2
Type de commutation	Alternating-/alternating switch

Actuator Type	Rocker/button
Type de raccordement	Plug Clamp
Type de montage	Flush Mounted
Finition de surface	Untreated Matt
Matériau	Duroplast
Label Space Provided	No
Voyant	Non-illuminated
RAL Number	RAL 5010 - Bleu gentiane
Application Function	Electrical Load and Light Control

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E0220
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	71 mm
Produit Hauteur Net	32 mm
Produit Longueur Net	71 mm
Poids net	68 g
Profondeur d'encastrement (t ₂)	32 mm

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.68 kg
Code douanier	85365080
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA100000E2664
--------------------------------	-----------------

Classifications

ETIM 8	EC001590 - Installation switch
ETIM 9	EC001590 - Installation switch
Catégorie DEEE	5. Small Equipment (No External Dimension More Than 50 cm)
DEEE B2C / B2B	Business To Consumer
CN8	8536 50 80
eClass	V11.0 : 27144053

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001731A4007	1764 NLI-13-82 Rocker with labelling field Switch/push button Single push button green - 63x63	1764 NLI-13-82	1	piece
2CKA001731A1858	1764 NLI-22G Rocker with labelling field Switch/push button Single rocker ivory - alpha	1764 NLI-22G	1	piece
2CKA001731A1569	1764 NLI-24G Rocker with labelling field Switch/push button Single rocker studio white - alpha	1764 NLI-24G	1	piece
2CKA001731A1975	1764 NLI-803 Rocker with labelling field Switch/push button Single rocker grey metallic - 63x63	1764 NLI-803	1	piece
2CKA001731A1552	1764 NLI-81 Rocker with labelling field Switch/push button Single push button anthracite - 63x63	1764 NLI-81	1	piece
2CKA001731A1876	1764 NLI-82 Rocker with labelling field Switch/push button Single push button ivory white - 63x63	1764 NLI-82	1	piece
2CKA001731A1948	1764 NLI-83 Rocker with labelling field Switch/push button Single push button aluminium silver - 63x63	1764 NLI-83	1	piece
2CKA001731A1877	1764 NLI-84 Rocker with labelling field Switch/push button Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001731A2024	1764 NLI-840-500 Rocker Switch/push button Single rocker Without imprint antique brass - 63x63	1764 NLI-840- 500	1	piece
2CKA001731A1953	1764 NLI-866 Rocker with labelling field Switch/push button Single push button stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	1764 NLI-884 Rocker with labelling field Switch/push button Single push button studio white matt - 63x63	1764 NLI-884	1	piece
2CKA001731A1982	1764 NLI-885 Rocker with labelling field Switch/push button Single push button black matt - 63x63	1764 NLI-885	1	piece
2CKA001731A0355	2509-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2509-212-500	1	piece
2CKA001731A0900	2509-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2509-214	1	piece
2CKA001731A1995	2509-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2509-214-500	1	piece
2CKA001751A1625	1789-20 Rocker Switch/push button Single rocker platinum - alpha	1789-20	1	piece
2CKA001751A1716	1789-21 Rocker Switch/push button Single rocker bronze - alpha	1789-21	1	piece
2CKA001751A2490	1789-22G Rocker Switch/push button Single rocker ivory - alpha	1789-22G	1	piece
2CKA001751A2102	1789-24G Rocker Switch/push button Single rocker studio white - alpha	1789-24G	1	piece
2CKA001751A2825	1789-260 Rocker Switch/push button Single rocker palladium - alpha	1789-260	1	piece
2CKA001751A2836	1789-266 Rocker Switch/push button Single rocker titanium - alpha	1789-266	1	piece
2CKA001751A3013	1789-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789-803	1	piece
2CKA001751A2928	1789-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789-81	1	piece
2CKA001751A2813	1789-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789-82	1	piece
2CKA001751A2945	1789-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789-83	1	piece

2CKA001751A3118	1789-840-500 Cover Plates Switch/push button Single rocker Without imprint antique brass - 63x63	1789-840-500	1	piece
2CKA001751A3091	1789-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001751A2957	1789-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	1789-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789-884	1	piece
2CKA001751A3047	1789-885 Rocker Switch/push button Single rocker black matt - 63x63	1789-885	1	piece
2CKA001731A0272	2520 LI-212 Rocker Switch/push button Single rocker white - Busch-Duro 2000	2520 LI-212	1	piece
2CKA001731A1996	2520 LI-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" alpine white - Reflex SI/SI Linear	2520 LI-214- 500	1	piece
2CKA001751A3185	2520 LI-803 Rocker Switch/push button Single rocker grey metallic - 63x63	2520 LI-803	1	piece
2CKA001751A3186	2520 LI-81 Rocker Switch/push button Single rocker anthracite - 63x63	2520 LI-81	1	piece
2CKA001751A3187	2520 LI-82 Rocker Switch/push button Single rocker ivory white - 63x63	2520 LI-82	1	piece
2CKA001751A3188	2520 LI-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	2520 LI-83	1	piece
2CKA001751A3191	2520 LI-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	2520 LI-884 Rocker Switch/push button Single rocker studio white matt - 63x63	2520 LI-884	1	piece
2CKA001751A3193	2520 LI-885 Rocker Switch/push button Single rocker black matt - 63x63	2520 LI-885	1	piece
2CKA001731A2000	2520-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2520-212-500	1	piece
2CKA001731A0413	2520-212-506 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint white - Busch-Duro 2000	2520-212-506	1	piece
2CKA001731A1994	2520-214-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint alpine white - Reflex SI/SI Linear	2520-214-500	1	piece
2CKA001731A0561	2506 N-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2506 N-212	1	piece
2CKA001731A0520	2506 N-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2506 N-214	1	piece
2CKA001731A1445	2510 NLI-212 Rocker with labelling field Switch/push button Single rocker white - Busch-Duro 2000	2510 NLI-212	1	piece
2CKA001731A1452	2510 NLI-214 Rocker with labelling field Switch/push button Single rocker alpine white - Reflex SI	2510 NLI-214	1	piece
2CKA001731A0330	2502-212-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Characters 0 and 1 white	2502-212-500	1	piece
2CKA001731A0884	2502-214 Rocker Switch/push button Single rocker alpine white - Reflex SI	2502-214	1	piece
2CKA001434A0455	2544-212 Rocker with legend Switch/push button Single rocker Neutral symbol white - Busch-Duro 2000	2544-212	1	piece
2CKA001434A0570	2544-214 Rocker with legend Switch/push button Single rocker Characters 0 and 1; neutral symbol alpine white - Reflex SI	2544-214	1	piece
2CKA001751A3146	1789 N-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1789 N-803	1	piece

2CKA001751A3147	1789 N-81 Rocker Switch/push button Single rocker anthracite - 63x63	1789 N-81	1	piece
2CKA001751A3148	1789 N-82 Rocker Switch/push button Single rocker ivory white - 63x63	1789 N-82	1	piece
2CKA001751A3149	1789 N-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1789 N-83	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3152	1789 N-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece
2CKA001751A3153	1789 N-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1789 N-884	1	piece
2CKA001751A3154	1789 N-885 Rocker Switch/push button Single rocker black matt - 63x63	1789 N-885	1	piece
2CKA001751A1633	1789 LI-20 Rocker with legend Switch/push button Single rocker Symbol "light" platinum - alpha	1789 LI-20	1	piece
2CKA001751A1724	1789 LI-21 Rocker with legend Switch/push button Single rocker Symbol "light" bronze - alpha	1789 LI-21	1	piece
2CKA001751A2516	1789 LI-22G Rocker with legend Switch/push button Single rocker Symbol "light" ivory - alpha	1789 LI-22G	1	piece
2CKA001751A2201	1789 LI-24G Rocker with legend Switch/push button Single rocker Symbol "light" studio white - alpha	1789 LI-24G	1	piece
2CKA001751A2828	1789 LI-260 Rocker with legend Switch/push button Single rocker Symbol "light" palladium - alpha	1789 LI-260	1	piece
2CKA001751A2839	1789 LI-266 Rocker with legend Switch/push button Single rocker Symbol "light" titanium - alpha	1789 LI-266	1	piece
2CKA001753A0072	1789 LI-72 Cover Plate Switch/push button Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A4815	1789 LI-74 Cover plate with legend Switch/push button Single rocker Symbol "light" alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0187	1789 LI-774 Cover plate with legend Switch/push button Single rocker Symbol "light" studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	1789 LI-775 Cover plate with legend Switch/push button Single rocker Symbol "light" black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	1789 LI-783 Cover plate with legend Switch/push button Single rocker Symbol "arrows" aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	1789 LI-79 Cover plate with legend Switch/push button Single rocker Symbol "light" champagne metallic - impuls	1789 LI-79	1	piece
2CKA001751A3014	1789 LI-803 Rocker with legend Switch/push button Single rocker Symbol "light" grey metallic - 63x63	1789 LI-803	1	piece
2CKA001751A2931	1789 LI-81 Rocker with legend Switch/push button Single rocker Symbol "light" anthracite - 63x63	1789 LI-81	1	piece
2CKA001751A2745	1789 LI-82 Rocker with legend Switch/push button Single rocker Symbol "light" ivory white - 63x63	1789 LI-82	1	piece
2CKA001751A2951	1789 LI-83 Rocker with legend Switch/push button Single rocker Symbol "light" aluminium silver - 63x63	1789 LI-83	1	piece
2CKA001751A3084	1789 LI-84-500 Cover Plates (partly incl. Insert) Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece

2CKA001751A2958	1789 LI-866 Rocker with legend Switch/push button Single rocker Symbol "light" stainless steel - Pure Stainless Steel	1789 LI-866	1	piece
2CKA001751A3031	1789 LI-884 Rocker with legend Switch/push button Single rocker Symbol "light" studio white matt - 63x63	1789 LI-884	1	piece
2CKA001751A3045	1789 LI-885 Rocker with legend Switch/push button Single rocker Symbol "light" black matt - 63x63	1789 LI-885	1	piece
2CKA001731A4011	1764 NLI-12-82-101 Rocker with labelling field Switch/push button Single push button red - 63x63	1764 NLI-12-82-101	1	piece
2CKA001751A1674	1788-20 Rocker Switch/push button Single rocker platinum - alpha	1788-20	1	piece
2CKA001751A1765	1788-21 Rocker Switch/push button Single rocker bronze - alpha	1788-21	1	piece
2CKA001751A2557	1788-22G Rocker Switch/push button Single rocker ivory - alpha	1788-22G	1	piece
2CKA001751A2326	1788-24G Rocker Switch/push button Single rocker studio white - alpha	1788-24G	1	piece
2CKA001751A2823	1788-260 Rocker Switch/push button Single rocker palladium - alpha	1788-260	1	piece
2CKA001751A2834	1788-266 Rocker Switch/push button Single rocker titanium - alpha	1788-266	1	piece
2CKA001751A3017	1788-803 Rocker Switch/push button Single rocker grey metallic - 63x63	1788-803	1	piece
2CKA001751A2927	1788-81 Rocker Switch/push button Single rocker anthracite - 63x63	1788-81	1	piece
2CKA001751A2742	1788-82 Rocker Switch/push button Single rocker ivory white - 63x63	1788-82	1	piece
2CKA001751A2954	1788-83 Rocker Switch/push button Single rocker aluminium silver - 63x63	1788-83	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2961	1788-866 Rocker Switch/push button Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	1788-884 Rocker Switch/push button Single rocker studio white matt - 63x63	1788-884	1	piece
2CKA001751A3042	1788-885 Rocker Switch/push button Single rocker black matt - 63x63	1788-885	1	piece
2CKA001751A1690	1789 H-20 Rocker with legend Switch/push button Single rocker Heizung platinum - alpha	1789 H-20	1	piece
2CKA001751A1781	1789 H-21 Rocker with legend Switch/push button Single rocker Heizung bronze - alpha	1789 H-21	1	piece
2CKA001751A2573	1789 H-22G Rocker with legend Switch/push button Single rocker Heizung ivory - alpha	1789 H-22G	1	piece
2CKA001751A2375	1789 H-24G Rocker with legend Switch/push button Single rocker Heizung studio white - alpha	1789 H-24G	1	piece
2CKA001751A2826	1789 H-260 Rocker with legend Switch/push button Single rocker Heizung palladium - alpha	1789 H-260	1	piece
2CKA001751A2837	1789 H-266 Rocker with legend Switch/push button Single rocker Heizung titanium - alpha	1789 H-266	1	piece
2CKA001753A0068	1789 H-72-101 Cover plate with labelling field Switch/push button Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	1789 H-74-101 Cover plate with labelling field Switch/push button Single rocker alpine white - impuls	1789 H-74-101	1	piece
2CKA001753A0184	1789 H-774-101 Cover plate with labelling field Switch/push button Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0154	1789 H-775-101 Cover plate with labelling field Switch/push button Single rocker black matt - impuls	1789 H-775-101	1	piece

2CKA001753A0069	1789 H-783-101 Cover plate with labelling field Switch/push button Single rocker aluminium silver - impuls	1789 H-783- 101	1	piece
2CKA001753A6612	1789 H-79-101 Cover plate with labelling field Switch/push button Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001751A3019	1789 H-803 Rocker with legend Switch/push button Single rocker Heizung grey metallic - 63x63	1789 H-803	1	piece
2CKA001751A2929	1789 H-81 Rocker with legend Switch/push button Single rocker Heizung anthracite - 63x63	1789 H-81	1	piece
2CKA001751A2743	1789 H-82 Rocker with legend Switch/push button Single rocker Heizung ivory white - 63x63	1789 H-82	1	piece
2CKA001751A2955	1789 H-83 Rocker with legend Switch/push button Single rocker Heizung aluminium silver - 63x63	1789 H-83	1	piece
2CKA001751A2751	1789 H-84 Rocker with legend Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2963	1789 H-866 Rocker with legend Switch/push button Single rocker Heizung stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	1789 H-884 Rocker with legend Switch/push button Single rocker Heizung studio white matt - 63x63	1789 H-884	1	piece
2CKA001751A3043	1789 H-885 Rocker with legend Switch/push button Single rocker Heizung black matt - 63x63	1789 H-885	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts

