Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 12/24VAC/DC CL



Part No.:	261.410.70	
Series:	EvoSIGNAL	
MECHANI	CAL DATA	
Height		130 mm
Diameter		85 mm
Materials		PC
		PC/ABS
Dome colour		Clear
Housing colour		Grey
Protection category		IP66
Connection		Push-in terminal
cross-sectional area minimum		0,25mm² / 24AWG
cross-sectional area maximum		1,50mm² / 16AWG
Type of fixing		Adapter required
Working temperature minimum		-30°C
Working temperature maximum		+60°C
Weight with packaging		181 g
Product weight		139 g
ELECTRIC	AL DATA	
Operating		12V
		24V
Operating voltage type		AC/DC
Operating voltage frequency		50Hz
Operating [•]	voltage tolerance	+/- 10%
Rated operational voltage		12 VDC
Rated operational current		175 mA
Rated inrush current		1A
Protection class		Protection class 2
Pollution degree		3
Overvoltage category		III
OPTICAL	DATA	
Light source		LED
Light colour		White
Optical signal image		Blink
		Permanent TwinLight
Blink frequency		1 Hz
Service life optical		50,000 h minimum
Pulse- & pause Duration [ms]		466ON, 5570FF
APPROVA	Ι ΠΑΤΑ	

APPROVAL DATA


For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed ! copy is for information only and is subject to alteration.

Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 12/24VAC/DC CL

Conforme with CE	Vac
Conforms with CE	Yes
Conforms with RoHS directive	Yes
WEEE	Yes
Conforms with ATEX-directive	No
Conforms with CCC	No
Conforms with UL	cULus
UL Type Rating	Type 12
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)
Conforms with AS-I	No
ICAO Certification	No
Conforms with DNV	No
Conforms with RoHS CN	No
Conforms with VdS	No
MTTF-value [years]	485

Provide the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

Midi free-standing Beacons / EvoSIGNAL Midi TwinLIGHT 12/24VAC/DC CL

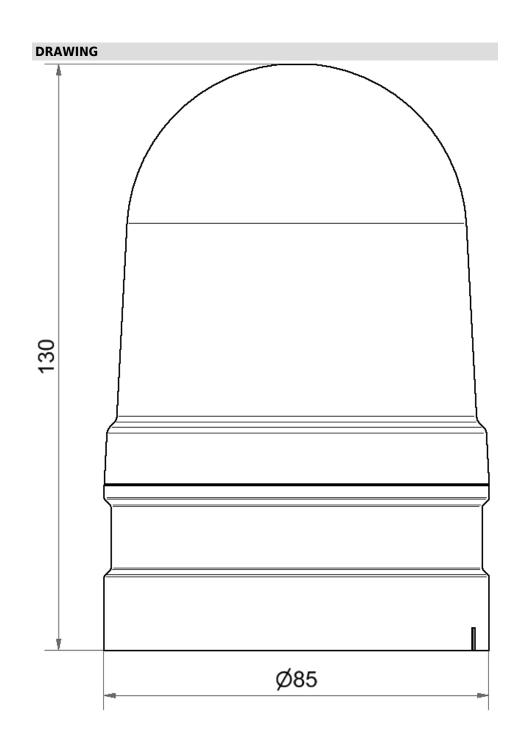

Pror additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.